Bearing Cup Installer

10201



Have What It Takes

Safety Warning

Read all instructions and safety warnings prior to operation. Failure to do so could result in equipment damage, personal injury or even death.

- Stay Alert! Watch what you are doing and use common sense when operating this tool.
- Inspect product for damage prior to using; do not use if product is in unsafe condition.
- Do not operate tool while under the influence of drugs, alcohol or medication.
- Always use safety equipment to prevent injuries. Approved face and eye protection must always be worn by the operator, as well as others in the work area.
- Do not overreach. Keep proper footing and balance at all times.
- Dress properly. Do not wear loose clothing or jewelry.
 Keep your hair, clothing and gloves away from moving parts.
- · Keep your work area clean and well lit.

Operating Instructions

- 1 Ensure all parts to be assembled are clean and/or greased where applicable.
- 2 Double check all needle bearings are present and placed correctly.
- 3 Start pressing bearing cup into yoke by hand, making sure U-joint cross and bearing cup bolt holes line up.
- 4 Place installer onto bearing cup, threading bolts into yoke.
- 5 Using an impact or hand wrench, turn forcing screw until cup is flush to yoke.
- 6 Remove tool and install bearing cup bolts.

Here at Tiger Tool, your satisfaction is our number one priority. Should you have any questions about this or any of our products, please call us at 1.800.661.4661.



Bearing Cup Installer

10201



Parts Breakdown



Item No.	Part Number	Description	Qty.
1	10201-1	Plate	1
2	10201-2	Bolt	2
3	10201-3	Forcing Screw	1