Heavy Duty Universal Hub Puller



Have What It Takes

10903

Safety Warning

Read all instructions and safety warnings prior to operation. Failure to do so could result in equipment damage, personal injury or even death.

- Stay Alert! Watch what you are doing and use common sense when operating this tool.
- · Inspect product for damage prior to using; do not use if product is in unsafe condition.
- Do not operate tool while under the influence of drugs, alcohol or medication.
- Always use safety equipment to prevent injuries. Approved face and eye protection must always be worn by the operator, as well as others in the work area.
- · Do not overreach. Keep proper footing and balance at all times.
- Dress properly. Do not wear loose clothing or jewelry.
 Keep your hair, clothing and gloves away from moving parts.
- · Keep hands clear of all pressurized hydraulic components.
- $\,\cdot\,$ Always ensure hoses are free from sharp bends and kinks.
- · Keep your work area clean and well lit.

Operating Instructions

- 1 Remove the nut that retains the hub and bearings to the axle.
- 2 Fully install the correct adapters onto opposing wheel studs on the hub.
- 3 Fully install the standoff screws, into the adapters, with the hex ends facing out.
- 4 Slide the crossbar over the two standoffs, and thread on the two handles.
- Place the axle plug against the center of the axle, and thread the forcing screw through the crossbar until it contacts the center of the plug.
- 6 Advance the forcing screw until the hub breaks free.

Here at Tiger Tool, your satisfaction is our number one priority. Should you have any questions about this or any of our products, please call us at 1.800.661.4661.



Heavy Duty Universal Hub Puller



Have What It Takes

10903

Parts Breakdown



| Item No. | Part Number | Description | Qty. |
|----------|-------------|----------------|------|
| 1 | 10903-1 | Cross Bar | 1 |
| 2 | 10903-5 | Standoff Screw | 2 |
| 3 | 10803-11 | Forcing Screw | 1 |
| 4 | 10901-4 | Axle Plug | 1 |
| 5 | 10630-RH | Adapter | 2 |
| 6 | 10903-6 | Flange Nut | 2 |
| 7 | 10901-5 | 0-Ring | 1 |