Slack Adjuster Rod Pin Press

10502



Have What It Takes

Safety Warning

Read all instructions and safety warnings prior to operation. Failure to do so could result in equipment damage, personal injury or even death.

- Stay Alert! Watch what you are doing and use common sense when operating this tool.
- Inspect product for damage prior to using; do not use if product is in unsafe condition.
- Do not operate tool while under the influence of drugs, alcohol or medication.
- Always use safety equipment to prevent injuries. Approved face and eye protection must always be worn by the operator, as well as others in the work area.
- Do not overreach. Keep proper footing and balance at all times.
- Dress properly. Do not wear loose clothing or jewelry.
 Keep your hair, clothing and gloves away from moving parts.
- Keep hands clear of all pressurized hydraulic components.
- Always ensure hoses are free from sharp bends and kinks.
- · Keep your work area clean and well lit.

Operating Instructions

Threads must remain clean and well lubricated at all times. Do not use over %" air ratchet—doing so will void warranty.

- 1 Back out the forcing screw.
- 2 Pull back the spring-loaded plunger and slip the tool over the slack adjuster rod pin.
- 3 Turn forcing screw by hand or with a %" air ratchet, the tool will shear the cotter pin.
- 4 Once the pin is free of the rod/clevis, back out the forcing screw and remove tool.

Here at Tiger Tool, your satisfaction is our number one priority. Should you have any questions about this or any of our products, please call us at 1.800.661.4661.



Slack Adjuster Rod Pin Press

Tiger Tool

Have What It Takes

10502

Parts Breakdown



Item No.	Part Number	Description	Qty.
1	10502-1	Frame	1
2	10502-2	Spring	1
3	10502-3	Plunger	1
4	10502-4	Forcing Screw	1
5	10501-5	Spring Pin	1