



How to Install EZ Claw Yard Truck

Instructional video

www.ezclaw.com

OR

www.youtube.com/watch?v=0fQggreExSs

Step 1

EZ Claw Yard Truck is an innovative and automatic system which eliminates the problems with traditional springs securing brake hoses and electrical cord.

1.1

EZ Claw Yard Truck can be used for coiled or straight hoses. Straight hoses must be 13 feet or longer and coiled hoses should be as long as possible.

1.2

Remove existing hardware.

Step 2.0

EZ Claw Yard Truck should be mounted as high as possible without interference.

2.1

Hold the fully assembled EZ Claw Yard Truck unit in place at a 45 degree angle and mark the two bolt holes making sure that there are no obstructions inside or outside of the cab.

2.2

Remove and set plastic cover aside.

Step 3

Use a punch for accurate drilling location.

Step 4

Drill a ¼ inch or other preferred size pilot hole.

Step 5

Drill two .531 holes using a 17/32 inch drill bit to accept the 3/8-16 X .150 - .312 rivet nuts.

Step 6

Place 3/8 – 16 rivet nut onto Marson 325-RN or other insert tool and attach.

Step 7

Secure EZ Claw Yard Truck with 3/8" – 16 bolts.

Step 8

Tighten bolts with 9/16 socket.

Step 9

Re-Install EZ Claw Yard Truck cover.

Step 10

Securing Glad Hand hoses onto EZ Claw Yard Truck unit.

Place the EZ Claw Hose & Cable Holder onto the hoses / cord tighten ¼ bolts and nylock nuts using 7/16 wrench and socket. Make sure that the shackle is properly positioned and secured to the tensioner thimble.

Step 11

Tensioners are quality tested and adjusted prior to shipment. Should it be deemed necessary to modify the tension do so with extreme caution.

11.1

Remove the EZ Claw Yard Truck unit from the tractor. Remove the cover. Hold tensioner firmly and insert needle nose pliers in hole of axle and hold roll-pin. Remove cotter pin from other end of axle.

11.2

While maintaining tension turn axle counter clock-wise for less tension or clock-wise not more than ½ to 1 full turn to increase tension. Replace cotter pin. Attach cover and unit to Yard Truck.

EZ Claw Yard Truck in action

EZ Claw allows for 15 feet of straight hose movement, with 90 degree trailer movement without hose and cable chaffing on the deck plate.

EZ Claw's operate 24/7, in all weather conditions and require zero maintenance.