

BACKRACK™

CAB GUARDS • SIDERAILS • ACCESSORIES



OPEN FOR 2020 APPLICATIONS

MOUNTING OPTIONS



STANDARD
No Drill
Example: 30119



TOOLBOX
No Drill
Example: 30119TB



LOW PROFILE DRILL
Drilling Required
Example: 30119LP

THE ONE, THE ONLY ORIGINAL BACKRACK™

Toll Free: 1-800-265-8137
Local: 905-849-3633

info@backrack.ca
475 Wycroft Rd.
Oakville, ON L6K 2H2

WWW.BACKRACK.COM For more information visit www.BACKRACK.com

ACCESSORIES

RACK STYLE COMPATIBILITY	ACCESSORY DESCRIPTION	PART #
Safety, Louvered, Open, Half Louvered, Half Safety, Three Round, Three Light	Light Bracket, 11" x 11" Base, Safety Rack	41000
Backrack™	Light Bracket, 6-1/2" Base, Drivers Side	81001
Backrack™	Light Bracket, 6-1/2" Base, Passenger Side	81003
Safety, Louvered, Open, Half Louvered, Half Safety, Three Round, Three Light	Light Bracket, 6-1/2" Base, Driver/Passenger Side	81004
Backrack™	Light Bracket, 10-1/2" Base, Drivers Side	91001
Backrack™	Light Bracket, 10-1/2" Base, Center Mount	91002
Backrack™	Light Bracket, 10-1/2" Base, Passenger Side	91003
Backrack™, Safety, Louvered, Open, Half Louvered, Half Safety, Three Round	Arrow Stick Brackets (pr)	91004
Backrack™	Sport Light Brackets (pr)	91005
Backrack™	Light Bar Brackets (pr)	91006
Backrack™	Light Bracket, 16" x 7" Base, Drivers or Passenger Side	91007
Backrack™	Antenna Bracket, 3.50" Square with 7/8" Hole	91008
Safety, Louvered, Open, Half Louvered, Half Safety, Three Round, Three Light	Antenna Bracket, 3.50" Square with 7/8" Hole	91009
Backrack™, Safety, Louvered, Open, Half Louvered, Half Safety, Three Round, Three Light*	Light Bracket, 16" x 7" Base, Center Mount	91002REC
Backrack™, Safety, Louvered, Open, Half Louvered, Half Safety, Three Round, Three Light*	Light Bracket, 16" x 7" Base, Center Mount Folding	91002RECF
Backrack™, Safety, Louvered, Open, Half Louvered, Half Safety, Three Round	Landscape Tool Attachment, Clamp On, Universal for all Racks, 11 Tools	41011
Backrack™, Safety, Louvered, Open, Half Louvered, Half Safety, Three Round	Landscape Tool Attachment, Clamp On, Universal for all Racks, 5 Tool Mini	41005
Backrack™, Safety, Louvered, Open, Half Louvered, Half Safety, Three Round, Three Light	Mining / Buggy Whip Bracket, Universal for all Racks	41008
Backrack™, Safety, Louvered **	Offroad Light Bracket, Clamp On, Universal for all Racks	42005
Backrack™, Safety, Louvered, Open, Half Louvered, Half Safety, Three Round, Three Light ***	Ladder Bracket Accessory	42015

See website for complete descriptions and images.

*Longer bolts required (not included) for use with Safety, Louvered, Open, Half Louvered, Half Safety, Three Round, Three Light

**Excludes Compact Trucks (Colorado, Tacoma, Frontier etc.)

Backrack compatible accessories may be used on other styles drilling & cutting is required

*** SECURE ALL CARGO PROPERLY USING TIE DOWN TECHNIQUES WITH CORRECTLY RATED STRAPS.

SIDERAILS

	5.5 FT BEDS		6.5 FT BEDS		8 FT BEDS	
	5.5 FT STANDARD	5.5 FT TOOLBOX	6.5 FT STANDARD	6.5 FT TOOLBOX	8 FT STANDARD	8.5 FT TOOLBOX
CHEV/GMC						
2019-TD Silverado / Sierra 2500/3500 HD	NA	NA	65524	65524TB	80524	80524TB
2019-TD Silverado / Sierra 1500 LD	55522	55522TB	65522	65522TB	80522	80522TB
2014-2018 Silverado / Sierra	55520	55520TB	65520	65520TB	80520	80520TB
2007-2013 Silverado / Sierra	55519	55519TB	65519	65519TB	80519	80519TB
DODGE						
2019-TD 2500/3500 02-18 Ram 8 ft / 10-17 6.5 ft / 02-08 All Beds	NA	NA	65517	65517TB	80517	80517TB
2019-TD Ram 1500	NA	NA	65567	65567TB	80567	80567TB
FORD						
2017-TD Superduty Aluminum Body	NA	NA	65521	65521TB	80521	80521TB
1999-2016 Superduty	NA	NA	65501	65501TB	80501	80501TB
2015-TD F-150 Aluminum Body	55523	55523TB	65523	65523TB	80523	80523TB
2004-2014 F-150	55512	55512TB	65512	65512TB	80512	80512TB

Siderails are not compatible with over the rail bed liners.

Siderails are not compatible with Low Profile Drill Hardware Kits.

Siderails are not compatible with 50XXX Hardware Kits.

Siderails are compatible with Standard and 21" Toolbox Hardware Kits.

8 ft siderails exceed UPS and Fed Ex dimensional limits. Oversize fees applicable.

TOOLBOX BRACKETS

	21" TOOLBOX	31" TOOLBOX
Use only if a rack is installed on the truck already, and are adding a toolbox.	TOOLBOX BRACKET 21" BRACKETS ONLY NO BOLTS	TOOLBOX BRACKET 31" BRACKETS ONLY NO BOLTS
CHEV/GMC		
1968-TD Silverado, Sierra	91010	91010-31
2015-TD Colorado / Canyon	91010	91010-31
2004-2014 Colorado / Canyon	91010C	NA
1985-2005 S10 / S15	91010C	NA
DODGE		
1968-TD Ram 5.5/6.5/8 ft Bed	91010	91010-31
2009-2018 Ram 5.5/6.5 ft Rambox Only	NA	NA
1987-TD Dakota	91010C	NA
FORD		
2017-TD Superduty Aluminum Body	91021	91021-31
1999-2016 Superduty	91011	91011-31
2015-TD F-150 Aluminum Body	91023	91023-31
2004-2014 F-150	91013	91013-31
1997-2003 F-150 (No Supercrew)	91012	91012-31
1975-1996 F-150 6.5/8 ft	91010	91010-31
1993-2014 Ranger	91010	91010-31
TOYOTA		
1995-TD Tundra	91010	91010-31
2016-TD Tacoma	91024	NA
2005-2015 Tacoma	91014	NA
1997-2004 Tacoma	91010C	NA
NISSAN		
2016-TD Titan	91010C	NA
2004-2015 Titan	91010	91010-31
1987-TD Frontier	91010C	NA
MAZDA		
1993-2014 Mazda	91010	91010-31

Toolbox Brackets have no fasteners, designed to replace Standard Hardware Brackets, someone who has a rack on their truck already and is adding a toolbox.

REAR BARS

APPLICATION	PART #
CHEV/GMC	
2019-TD Silverado / Sierra 2500/3500 HD	11524
2019-TD Silverado / Sierra New Body Only	11522
2014-2019 Silverado / Sierra Old Body	11520
2007-2013 Silverado, Sierra	11519
1999-2007 Classic	11509
1988-1998 CK Series	11503
1968-1987 Chev / GMC	11504C
2004-TD Colorado / Canyon	NA
1985-2005 S10 / S15	NA
DODGE	
2019-TD Ram All Beds	11527
2002-2018 Ram 8 ft / 2010-2018 6.5 ft / 2002-2008 All Beds	11517
2009-2018 Ram 5.5 ft Bed Only	11527
2009-2018 Ram 5.5/6.5 ft Rambox Only	NA
1994-2001 Ram	11507
1968-1993 Ram	NA
1987-TD Dakota	NA
FORD	
2017-TD Superduty Aluminum Body	11523
1999-2016 Superduty	11501
2015-TD F-150 Aluminum Body	11523
2004-2014 F-150	11512
1997-2003 F-150 (No Supercrew)	11502
1975-1996 F-150 6.5ft/8ft	11506
1993-2014 Ranger	11310R
TOYOTA	
2008-TD Tundra	11518
1995-2007 Tundra	11508
1997-TD Tacoma	NA
NISSAN	
2016-TD Titan	NA
2004-2015 Titan	NA
1987-TD Frontier	NA
MAZDA	
1993-2014 Mazda	11310R

Choose Your Cab Guard Frame & Hardware Kit

	CHOOSE YOUR CAB GUARD FRAME									CHOOSE YOUR HARDWARE KIT			
	BACKRACK™	SAFETY	LOUVERED	OPEN	HALF LOUVERED	HALF SAFETY	THREE ROUND	THREE LIGHT	Lights not included	STANDARD NO DRILL	TOOLBOX NO DRILL 21"	TOOLBOX NO DRILL 31"	LOW PROFILE DRILL
CHEV/GMC													
2019-TD Silverado / Sierra 2500/3500 HD	15020	10800	12800	14800	148LV	148SM	148TR	148TL		30124	30122TB	30122TB31	30124LP
2019-TD Silverado / Sierra 1500 LD New Body Only	15019	10900	12900	14900	149LV	149SM	149TR	149TL		30122	30122TB	30122TB31	30119LP
2008-2019 Silverado / Sierra Old Body	15004	10500	12500	14500	145LV	145SM	145TR	145TL		30119	30119TB	30119TB31	30119LP
1999-2007 Classic	15003	10400	12400	14400	144LV	144SM	144TR	144TL		30109	30109TB	30109TB31	NA
1988-1998 CK Series	15004	10400	12400	14400	144LV	144SM	144TR	144TL		30103	30103TB	30103TB31	NA
1968-1987 Chev / GMC	15005	10400	12400	14400	144LV	144SM	144TR	144TL		30103	30103TB	30103TB31	NA
2015-TD Colorado / Canyon	15002	10600	NA	NA	NA	NA	NA	NA		30126	30126TB	30126TB31	NA
2004-2014 Colorado / Canyon	15015	10200	NA	NA	NA	NA	NA	NA		30116	30116TB	NA	NA
1985-2005 S10 / S15	15010	10200	NA	NA	NA	NA	NA	NA		30113	30113TB	NA	NA
DODGE													
2019-TD Ram 1500	15006	10400	12400	14400	144LV	144SM	144TR	144TL		30167	30167TB	30167TB31	30117LP
2019-TD 2500/3500 02-18 Ram 8 ft/10-17 6.5 ft/02-08 All Beds	15006	10400	12400	14400	144LV	144SM	144TR	144TL		30117	30117TB	30117TB31	30117LP
2009-2018 Ram 5.5 ft Bed Only	15006	10400	12400	14400	144LV	144SM	144TR	144TL		30127	30117TB	30117TB31	30127LP
2009-2018 Ram 5.5/6.5 ft Ram Box Only	15017	NA	NA	NA	NA	NA	NA	NA		30147	NA	NA	NA
1994-2001 Ram	15005	10400	12400	14400	144LV	144SM	144TR	144TL		30107	30107TB	30107TB31	NA
1968-1993 Ram	15005	10400	12400	14400	144LV	144SM	144TR	144TL		30103	30103TB	30103TB31	NA
2005-TD Dakota	15016	10200	NA	NA	NA	NA	NA	NA		30113	30113TB	NA	NA
1987-2004 Dakota	15009	10200	NA	NA	NA	NA	NA	NA		30113	30113TB	NA	NA
FORD													
2017-TD Superduty Aluminum Body	15018	10700	12700	14700	147LV	147SM	147TR	147TL		30221	30221TB	30221TB31	NA
1999-2016 Superduty	15001	10300	12300	14300	143LV	143SM	143TR	143TL		30201	30201TB	30201TB31	30201LP
2015-TD F-150 Aluminum Body	15004	10500	12500	14500	145LV	145SM	145TR	145TL		30123	30123TB	30123TB31	NA
2004-2014 F-150	15004	10500	12500	14500	145LV	145SM	145TR	145TL		30112	30112TB	30112TB31	30112LP
1997-2003 F-150 (No Supercrew)	15003	10400	12400	14400	144LV	144SM	144TR	144TL		30102	30102TB	30102TB31	NA
1997-2003 F-150 5.5 ft (Supercrew)	15003	10400	12400	14400	144LV	144SM	144TR	144TL		30104	30104TB	NA	NA
1975-1996 F-150 6.5 ft	15005	10400	12400	14400	144LV	144SM	144TR	144TL		30105	30106TB	30106TB31	NA
1975-1996 F-150 8 ft	15005	10400	12400	14400	144LV	144SM	144TR	144TL		30106	30106TB	30106TB31	NA
1993-2014 Ranger	15009	10200	NA	NA	NA	NA	NA	NA		30111	30111TB	30111TB31	NA
TOYOTA													
2008-TD Tundra	15004	10500	12500	14500	145LV	145SM	145TR	145TL		30118	30118TB	30118TB31	NA
1995-2007 Tundra	15007	10400	12400	14400	144LV	144SM	144TR	144TL		30108	30108TB	30108TB31	NA
2016-TD Tacoma	15002	10200	NA	NA	NA	NA	NA	NA		30327	30327TB	NA	NA
2005-2015 Tacoma	15010	10200	NA	NA	NA	NA	NA	NA		30317	30317TB	NA	NA
1997-2004 Tacoma	15009	10200	NA	NA	NA	NA	NA	NA		30113	30113TB	NA	NA
NISSAN													
2016-TD Titan	15004	10500	12500	14500	145LV	145SM	145TR	145TL		30113	30113TB	NA	NA
2004-2015 Titan	15003	10400	12400	14400	144LV	144SM	144TR	144TL		30511	30511TB	30511TB31	NA
2005-TD Frontier	15016	10200	NA	NA	NA	NA	NA	NA		30113	30113TB	NA	NA
1987-2005 Nissan	15009	10200	NA	NA	NA	NA	NA	NA		30113	30113TB	NA	NA
MAZDA													
1993-2014 Mazda	15009	10200	NA	NA	NA	NA	NA	NA		30111	30111TB	30111TB31	NA

Siderails are not compatible with Low Profile Drill Hardware Kits.
 Tonneau Adaptor Kit compatible with Standard Hardware only.
 Standard and Toolbox Hardware Kit are no drill on most late model full-size trucks.
 Low Profile Drill Hardware Kit (LP) requires drilling through bed rail.
 Low Profile Drill are compatible with Toolboxes.

CAB GUARD FRAMES



15XXX



12X00



14XSM



14XTR



10X00



14X00



14XLV



14XTL

*Lights not included

TONNEAU COMPATIBLE HARDWARE

	40XXX SERIES		50XXX SERIES	
	HARDWARE	FRAME	HARDWARE	FRAME
CHEV/GMC				
2019-TD Silverado / Sierra 2500/3500 HD	40124	15020	50124	15022
2019-TD Silverado / Sierra 1500 LD New Body Only	40122	15019	50122	15029
2014-2019 Silverado / Sierra Old Body	40120	15004	50120	15024
2007-2013 Silverado / Sierra	40119	15004	50119	15024
1999-2007 Silverado / Sierra	40109	15004	NA	NA
2015-TD Colorado / Canyon	40126	15002	NA	NA
DODGE				
2019-TD Ram 1500	40167	15006	50167	15026
2019-TD 2500/3500 02-18 Ram 8 ft /10-17 6.5 ft/02-08 All Beds	40117	15006	50117	15026
2009-2018 5.5 ft Ram	40127	15006	50127	15026
2009-TD Rambox	NA	NA	NA	NA
FORD				
2017-TD Superduty Aluminum Body	40221	15018	50221	15021
1999-2016 Superduty	40201	15001	50201	15021
2015-TD F-150 Aluminum Body	40123	15004	50123	15024
2004-2014 F-150	40112	15004	50112	15024
TOYOTA				
2008-18 Tundra	40118	15004	NA	NA
2005-TD Tacoma With Unitrack System	NA	NA	50327	15002



50XXX SERIES
Wide Top Rail Covers

50XXX Series Kits include everything required for installation except the BACKRACK™ Frame.

Unlike the previous 925XX Series, a separate Hardware Kit is not required for purchase. Example; Backrack for 2016 Sierra would require 50120 + 15024.

See website for videos further explaining 40XXX Series vs. 50XXX Series.



40XXX SERIES
Inside Rail Clamping Covers

40XXX Series Kits include everything required for installation except the BACKRACK™ Frame.

Unlike the previous 925XX Series, a separate Hardware Kit is not required for purchase.


Example: Louvered Rack for 2016 Sierra would require 40120 + 12500.



50XXX SERIES



40XXX SERIES

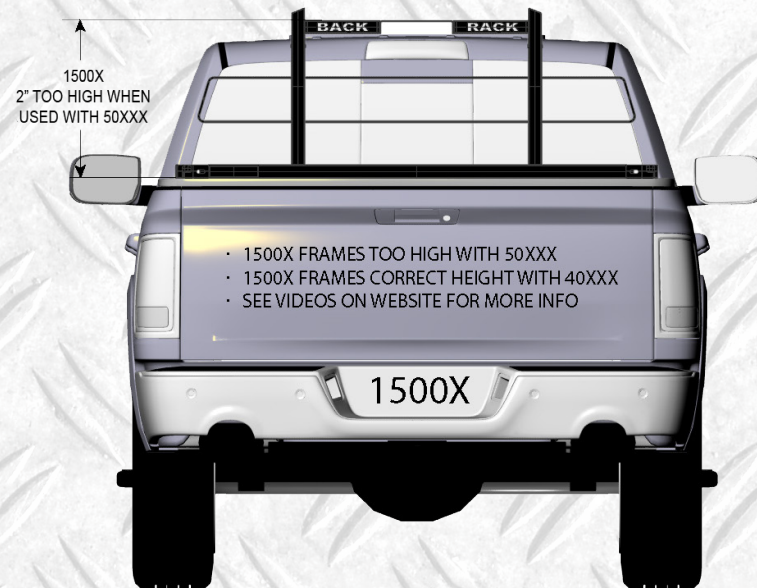

1500X
2" TOO HIGH WHEN
USED WITH 50XXX

- 1500X FRAMES TOO HIGH WITH 50XXX
- 1500X FRAMES CORRECT HEIGHT WITH 40XXX
- SEE VIDEOS ON WEBSITE FOR MORE INFO

1500X



1502X CORRECT
HEIGHT WHEN
USED WITH 50XXX

- 1502X FRAMES CORRECT HEIGHT WITH 50XXX
- 1502X FRAMES 2" SHORTER THAN 1500X
- SEE VIDEOS ON WEBSITE FOR MORE INFO

1502X

TONNEAU BRANDS COMPATIBILITY CHART

BRAND	MODEL	SERIES	SERIES
Access	Vanish	40XXX	
Access	Lorado	40XXX	
American	Hard Tri Fold		50XXX
American	Soft Tri Fold		50XXX
American	Soft Rolling	40XXX	
Bak Industries	Revolver X2	40XXX	
Bak Industries	BakFlip	40XXX	
Bak Industries	RollBak **	40XXX	
Bak Industries	RollX	40XXX	
BesTop	EZ Fold		50XXX
Extang	Solid Fold		50XXX
Extang	Trifecta		50XXX
Gator	Hybrid		50XXX
Gator	Soft Tri Fold		50XXX
Gator	FX3	40XXX	
Gator	Roll Up Series	40XXX	
Gator	Evo	40XXX	
Gator	FX	40XXX	
Gator	FX5	40XXX	
Gator	Retractable Trax	40XXX	
Ionic	Roll Up	40XXX	
Ionic	Tri Fold		50XXX
Lund	Genesis Tri Fold		50XXX
Lund	Genesis Roll Up	40XXX	
PRO EFX	Tri Fold		50XXX
Retrax	Powertrax One	40XXX	
Retrax	Powertrax Pro	40XXX	
Retrax	Retrax One	40XXX	
Rugged Cover	E Series Vinyl Folding		50XXX
Rugged Cover	Hard Folding		50XXX
Rugged Cover	Premium Vinyl Folding		50XXX
Rugged Cover	Premium Roll Up	40XXX	
Tonnopro	Hard Fold		50XXX
Tonnopro	Tonno Fold		50XXX
Truxedo	Titanium	40XXX	
Truxedo	LoPro	40XXX	
Truxedo	Edge	40XXX	
Tyger	Tri Fold		50XXX
Trail FX	Soft Folding		50XXX
Trail FX	Hard Bi Fold	40XXX	
Trail FX	Soft Rolling	40XXX	
Undercover	Flex	40XXX	

** Indicates drilling required in Tonneau to expose front Stake Holes. More Tonneau's are compatible. Visit website for more applications www.backrack.com

IMPORTANT INFORMATION - PLEASE READ BEFORE ORDERING

- Frames indicated above are BACKRACK™ frame style only
- 15021, 15022, 15024, 15026, & 15029 are reduced in height to sit cab-high when used with 50XXX Series
- All frames other than 15021, 15022, 15024, 15026, & 15029 will sit higher than the cab and will look odd on 50XXX Series
- If height clearance and looks are concerns, we recommend 15021, 15022, 15024, 15026, & 15029 with 50XXX Hardware
- 40XXX Series Hardware increases overall frame height by 1"
- 50XXX Series Hardware increases overall height by 2"
- All other frames are compatible with 40XXX & 50XXX but height increases 1" & 2" respectively
- All other frames specified for your truck are designed to sit near cab high with Standard Hardware
- Expect a 1" increase in height with 40XXX and 2" height increase with 50XXX