


Dri-Dek[®] customers are unique.

You recognize quality, form and function.


Installation Instructions and Care Tips
Read Me First

Kendall Products - Since 1977 POB 8656 Naples, Florida 34101 Made in USA

Dri-Dek® It's a snap to install.

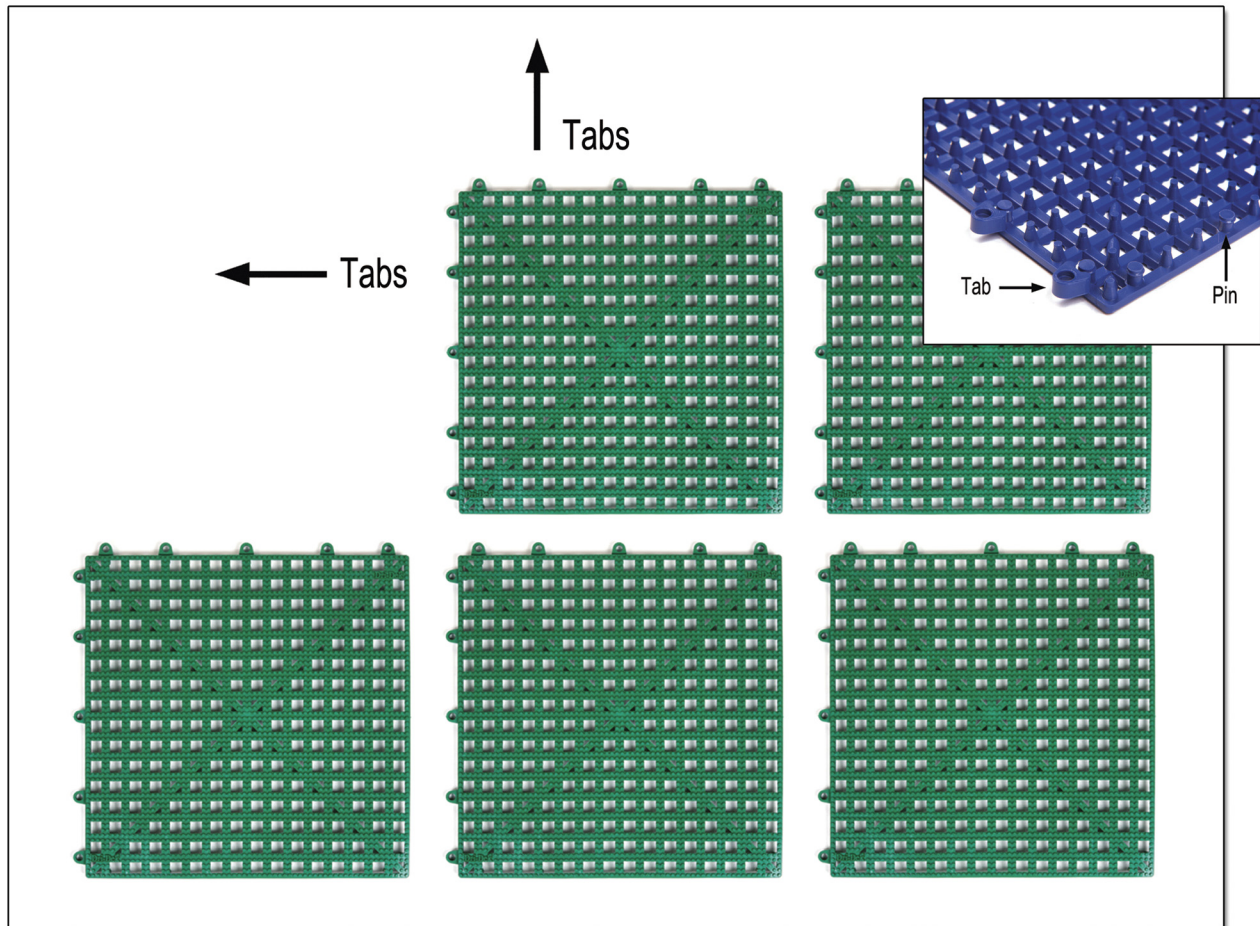


Size up the area you wish to cover. Layout the Dri-Dek Tiles™ in the desired configuration. Point the outer tabs of the Tiles in the same direction. Dri-Dek Sheets™ and Rolls™ will interlock in an identical manner. For large areas, install in independent sections approximately 10' x 10' to allow for ease of cleaning, maintenance and normal expansion and contraction from temperature variations.

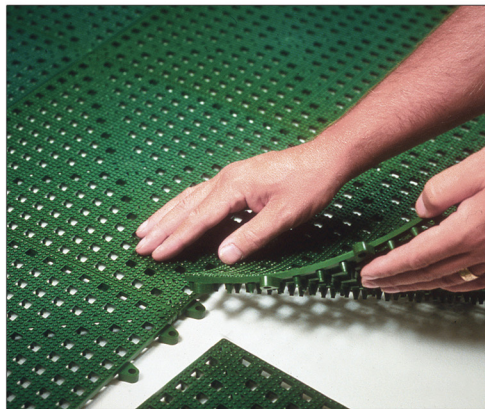

Snap the pins into the tabs along the entire section.

For larger installations, you may use a hammer to easily tap the pins into the tabs.

This can be done from the bottom or the top of the Tile.

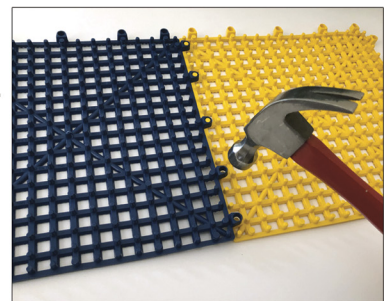


WARNING: Exercise caution when using a hammer or any sharp edged tools. If the product is used as a flooring and is not wall-to-wall or installed in sufficient quantities for stability, anchor securely by trimming to fit around columns, walls, or heavy stable equipment. Or preferably, anchor to the subsurface with screws or bolts. Not recommended for use in small quantities on slippery or polished surfaces. Do not use this product where high-heeled shoes may be worn. Not intended for use as a running surface.


Trim to fit for a wall-to-wall fit or around irregular shapes.



If your surface is not wall-to-wall use the 2" x 12" Edge™ and the 2" x 2" Corner™ to create a beveled border.

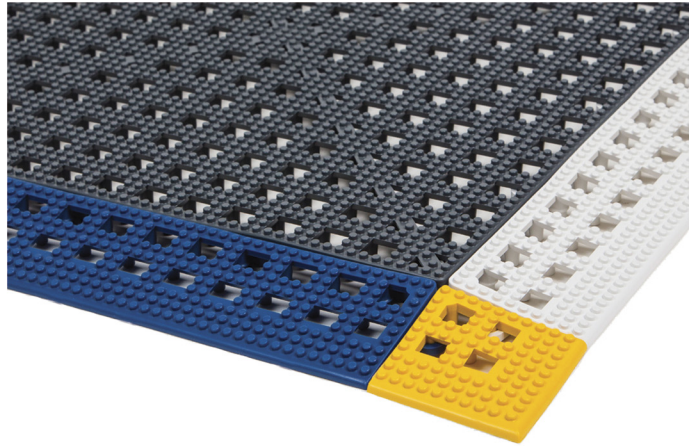

TIP: The 2" x 12' Edge will attach to all four finished sides of the Tiles, Sheets or Rolls.. Where the Edge tabs meet the Tile tabs, trim the tabs from the Edge to attach the Edges. Where Edge end tabs meet Edge end tabs, remove one of the tabs so the Edges can be snapped together. Where Edge tabs meet Tile pins, just snap on the Edges.

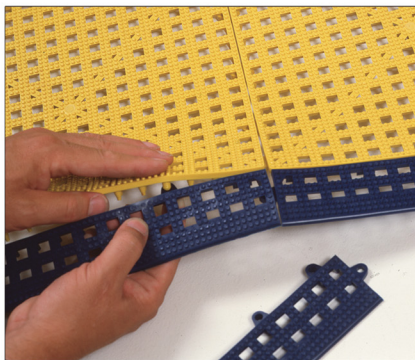

Corners will snap into the end of the Edge using the tabs on the end of the Edge. You may tap the Corners and Edges with a hammer to securely seat the pins into the tabs.

TIP: Measure and check twice, cut once.

Dri-Dek® Cleaning and Maintenance Tips

To reach drained dirt and debris simply roll back and sweep or rinse away with water. To clean the surface, hose it off with water or brush with detergent and rinse with water.

For high use areas or in a barefoot environment use a 2000 - 3000 PSI high pressure washer on both the top surface and the bottom surface to remove any build up of organic material. Frequency of cleaning is determined by useage. Proper cleaning maintenance will increase the performance and useful life of your surface.

Questions? Call 800-348-2398 M-F 8a-5p EST

